

## Remote Control


Model: ERA-REMOTE

### 1. FEATURES

The Wireless Remote Control enables you to turn the alarm system on and off before entering the home or after exiting.

In the event of an emergency, press SOS button on the remote control to trigger the panel. The Wireless Remote Control, compact and portable, is designed to fit on a keychain, in a pocket, or in a purse.

### 2. GET TO KNOW YOUR PRODUCT

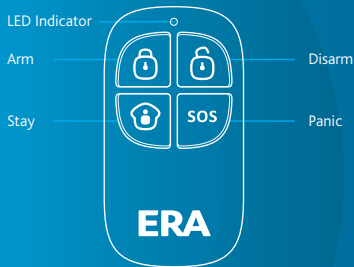

### 3. LED INDICATION

**Flashes Once:** Transmits the signal

**Low Light Level:** Low battery indication, change the battery.

### 4. SPECIFICATION

<b>Power Supply:</b>	DC 3V Lithium Batteries (CR2025) x 1
<b>Working Current:</b>	≤7mA
<b>Transmitting Distance:</b>	<80m (in open area)
<b>Radio Frequency:</b>	433 MHz (75±KHz)
<b>Housing Material:</b>	ABS Plastic
<b>Operations Condition:</b>	Temperature: 0°C ~ +55°C Relative Humidity: <80% (non-condensing)
<b>Remote Dimensions</b>	58 x 31 x 9.5mm (L x W x H)

**Note:** Please refer to the full system instructions for pairing a remote control

### 5. BUTTONS / FUNCTIONS

	Arm	Press to arm the control panel/siren and all of the accessories (Full Arm)
	Disarm	Press to disarm the system
	Part Arm (Home Arm)	Press to arm all sensors except the ones in zone A or Home Mode Zone, sensors in zone A or Home Mode Zone will not activate an alarm.
<b>SOS</b>	Panic Alarm	Press to activate the panic alarm (SOS). The control panel will auto-dial out to pre-set phone numbers immediately.
	Mute Arm	Press to arm the system with the solar siren in muted/silent mode.
	Mute Disarm	Press to disarm the system with the solar siren in mute/silent mode.